
















## Recommended Minimum Spare Parts List 50PF Oil Fusion Furnace

<i>Image</i>	<i>Description</i>	<i>Suggested Stock Qty.</i>	<i>Part Number</i>
	Air Pressure Switch DG6U-3 0.4-6mbar	1	FPAPS001
	Blower Assembly Aerotech 4 Pole (220 – 240V) (NG & Oil)	1	PFAERO4P
	Burner Controller LFL1.1635	2	RF336LFL
	Ceramic Anchor 3" (Complete Assembly) (Set of 8)	2	PC128008
	Foot Pedal (Festo)	1	RF357FFP
	Furnace Tile, 700 x 610 x 22mm (Suit 25 & 50PF Furnace)	10	LFT70022
	Gas Pilot Burner (Oil)	1	PF339GPA
	Ignition Lead (Copper Cord) (Per metre)	5	RF217000
	Ignition Transformer, TC1LVCA	1	RTC1L926
	Superwool Ceramic Fibre Blanket 25mm 7.6m x 610mm	1	JB128025










## Recommended Minimum Spare Parts List 50PF Oil Fusion Furnace

<i>Image</i>	<i>Description</i>	<i>Suggested Stock Qty.</i>	<i>Part Number</i>
	Oil Nozzle Burner 1.5 GPH @45 Deg.	4	RF335NZA
	Oil Pressure Gauge	1	PF334OPG
	Oil Pump Assembly (Excluding Motor)	1	RF332SOP
	Oil Solenoid	2	RF333OSD
	Spark Plug (Igniter) (NG & Oil)	2	RF338SPI
	Speed Controller ABB 0.75KW	1	RF37775C
	Temperature Controller RKC100CB	1	RF381RKC
	Thermocouple Element, Type K. 310mm	6	PF201FF1
	Thermocouple Head (1/2")	1	RJB35TCH
	Thermocouple Sheath (Inconel)	4	PF203FF2






## Recommended Minimum Spare Parts List 50PF Oil Fusion Furnace

<i>Image</i>	<i>Description</i>	<i>Suggested Stock Qty.</i>	<i>Part Number</i>
	U.V. Amp Meter	1	RF373UVA
	U.V. Cell, (Flame Detector) QRA.2	4	RF204FF3
	Parts Packaging & ISPM15 Certified Wood Crate	1	ZZPCRATE



## Recommended Minimum Spare Parts List 50PF Oil Fusion Furnace CANADA

<i>Image</i>	<i>Description</i>	<i>Suggested Stock Qty.</i>	<i>Part Number</i>
	Air Pressure Switch Honeywell C6097A1004	1	RFAPSHON
	Aero-Tech 110v Baldur Motor Comb Air Fan	1	RFBALDMR
	Burner Controller, LFL 1.635 110 Volt	2	RF110LFL
	Ceramic Anchor 3" (Complete Assembly) (Set of 8)	1	PC128008
	Foot Pedal (Festo)	1	RF357FFP
	Furnace Tile, 700 x 610 x 22mm (Suit 25 & 50PF Furnace)	10	LFT70022
	Gas Pilot Burner (Oil)	2	PF339GPA
	Ignition Lead (Copper Cord) (Per metre)	5	RF217000
	Ignition Transformer TZI7 5-20/33R	2	RFITTZ17

## Recommended Minimum Spare Parts List 50PF Oil Fusion Furnace CANADA

<i>Image</i>	<i>Description</i>	<i>Suggested Stock Qty.</i>	<i>Part Number</i>
	Superwool Ceramic Fibre Blanket 25mm 7.6m x 610mm	1	JB128025
	Oil Nozzle Burner 1.5 GPH @45 Deg.	4	RF335NZA
	Oil Pressure Gauge	1	PF334OPG
	Oil Pump Assembly (Excluding Motor)	1	RF332SOP
	Oil Solenoid	2	RF333OSD
	Spark Plug (Igniter) (NG & Oil)	2	RF338SPI
	Temperature Controller RKC100CB	1	RF381RKC
	Thermocouple Element, Type K. 310mm	6	PF201FF1
	Thermocouple Head (1/2")	1	RJB35TCH
	Thermocouple Sheath (Inconel)	4	PF203FF2

## Recommended Minimum Spare Parts List 50PF Oil Fusion Furnace CANADA

<i>Image</i>	<i>Description</i>	<i>Suggested Stock Qty.</i>	<i>Part Number</i>
	U.V. Amp Meter	1	RF373UVA
	U.V. Cell, (Flame Detector) QRA.2	4	RF204FF3
	Parts Packaging & ISPM15 Certified Wood Crate	1	ZZPCRATE